 
 


INSTRUCTIONS FOR 5.8G FPV VR GOGGLES


VR Goggles Functions

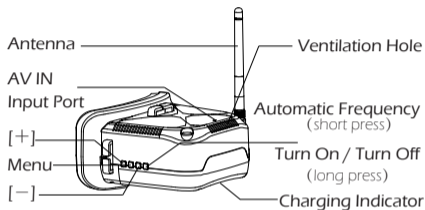

Wearing Headband

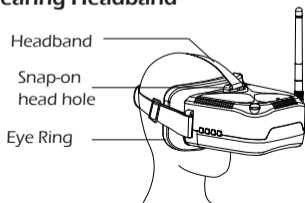

Charging

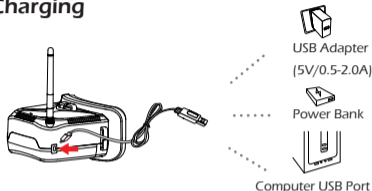

1. Plug the USB charging cable in to a USB charging port on the computer, power bank or USB adapter (5V @ 0.5 to 2.0A).
2. Connect the USB charging cable to the charging port on the VR glasses.
3. The charging indicator light at the bottom of VR glasses will turn on when the battery is charging, and will turn off when the battery is fully charged.
4. The VR glasses with OSD display battery voltage in real time.
5. The charging time is about 45 minuter, and the service time is about 1 hour.

Automatic Frequency Modulation

Long press the Scan button to turn on the VR glasses, and short press the Scan button for the automatic frequency function. (Need to wait for a moment.)

Manual Frequency Modulation

Frequency Table

Unit: GHz

	1	2	3	4	5	6	7	8
A	5.865	5.845	5.825	5.805	5.785	5.765	5.745	5.725
B	5.733	5.752	5.771	5.790	5.809	5.828	5.847	5.866
C	5.705	5.685	5.665	5.645	5.885	5.905	5.925	5.945
D	5.740	5.760	5.780	5.800	5.820	5.840	5.860	5.880
E	5.658	5.695	5.732	5.769	5.806	5.843	5.880	5.917

[+]: In the menu mode, press it to increase the parameters of the current function.

In the non-menu mode, press it to adjust the current frequency to the next frequency.

[-]: In the menu mode, press it to reduce the parameters of the current function.

In the non-menu mode, press it to adjust to the previous frequency of the current frequency.

[Menu]: Press to enter menu options functions, and press MEUN again to rotate each sub-menu.

This menu including "Backlight Adjustment", "Brightness Adjustment", "Contrast Adjustment", "Saturation Adjustment", "AV / AV IN Mode Setting" and "FREQ DISP" functions.

Adjust these functions with [+], [-]. And press the Menu button again to exit the menu interface.